


SPIRIT

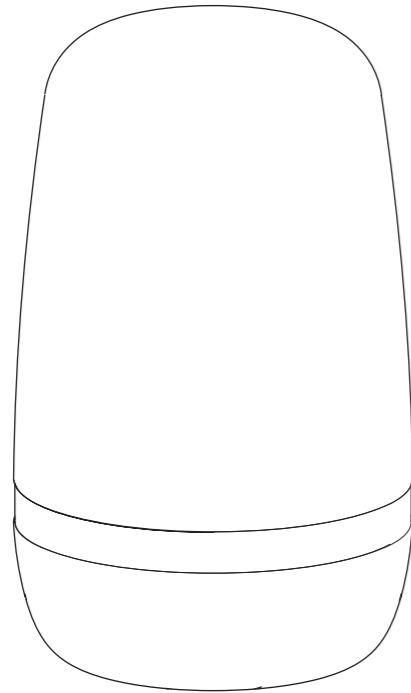

Luminous flux: 130 Lumen
 Output: 1,5 W
 Voltage: DC 3.7 V
 Protection class: III
 IP code: IP 44. Splash-proof.
 Light colour: 2700 K
 Input: 5V/DC 1A
 Dimensions: Height approx. 25 cm
 Burning period: 6-12 hours

GENERAL

Please read the operating instructions carefully before using the mobile LED light for the first time. Please keep these operating instructions for future reference.

This manual is part of the mobile LED-lamp SPIRIT 25 cm (hereinafter referred to as the 'lamp'). It contains important information about commissioning and handling. Read the operating instructions carefully before using the lamp, especially the safety instructions. Failure to follow these instructions may result in serious injury or damage to the lamp.

The operating instructions are based on the standards and rules that are valid in the European Union. In addition, please follow country-specific guidelines and laws abroad. Keep the operating instructions for further use. If you pass the lamp on to third parties, be sure to include these operating instructions.

Explanation of symbols

Declaration of Conformity - Products marked with this symbol comply with all applicable Community legislation of the European Economic Area.

This symbol indicates that the lamp complies with protection class III.

This symbol shows the IP code of the lamp. The lamp is splash-proof.

This symbol indicates a hazard with a medium level of risk which, if not avoided, can result in death or serious injury.

This symbol indicates a hazard with a low level of risk which, if not avoided, may result in minor or moderate injury.

SAFETY

Intended use

The lamp is exclusively designed for use indoors and outdoors in temperatures ranging between 0 °C and 40 °C. It is exclusively for private use and not for commercial applications.

Only use the light as described in these operating instructions: any other use is considered improper and may result in material damage or even personal injury. The lamp is not a child's toy. The manufacturer or dealer assumes no liability for damage caused by improper or incorrect use.

Risk of an electric shock!

- Only connect the lamp if the mains voltage of the plug socket matches that stated on the rating plate.

- Do not operate the lamp if it shows signs of visible damage or if the power cord and/or plug is defective.

- If the USB charging cable of the lamp is damaged, in order to avoid hazards, it must be replaced by the manufacturer, its service agent or a similarly qualified person.

- Do not open the housing. Instead, have it repaired by a technician. Contact a specialist workshop. Liability and warranty claims are excluded in the case of unauthorised repairs, improper connection or incorrect operation.

- In the case of repairs, only use parts that correspond to the original device data. This lamp contains electrical and mechanical parts which are essential for protecting against sources of danger.

- Do not operate the lamp with an external timer or a separate telecontrol system.

- Do not immerse the lamp or the USB charging cable in water or other liquids.

- Never touch the USB plug with wet hands.

- Never pull the USB plug out of the charging socket by the USB charging cable. Always hold the USB plug.

- Never use the USB charging cable as a carrying handle.

- Keep the lamp and the USB charging cable away from naked flames and hot surfaces.

- Place the USB charging cable in such a way that it does not become a trip hazard.

- Do not bend the USB charging cable and do not place it over sharp edges.

- Never use the lamp in wet rooms or in the rain.

- Never store the lamp so that it can fall into a bath or wash basin.

- Never reach for an electrical appliance if it has fallen into water.

- Make sure that children cannot put any objects into the lamp.

- If you do not use the lamp, clean it or if a fault occurs, always turn the lamp off and unplug the USB charging cable from the charging socket.

Hazards for children and persons with reduced physical, sensory or mental abilities (e.g. partially disabled, elderly persons with limited physical and mental abilities) or persons with a lack of experience and knowledge (e.g. older children).

- This lamp can be used by children aged eight and over, and by persons with reduced physical, sensory or mental abilities or a lack of experience and knowledge, if they have been supervised or instructed in the safe use of the lamp and understand the resulting hazards. Children are not allowed to play with the lamp. Cleaning and maintenance must not be performed by children without supervision.

- Keep children younger than eight years away from the lamp and the connection cable.

- Do not leave the lamp unattended when operating it.

- Do not let children play with the packaging film. Children can get caught up in it and suffocate when playing.

Risk of an explosion and fire!

Improper handling of the lamp and battery may cause an explosion or fire.

- Keep the lamp away from water, other liquids, naked flames and hot surfaces.

- Do not cover the lamp and the USB plug with objects or clothing.

- Keep a distance of at least 5 cm from flammable materials.

- Do not expose the lamp to excessive heat such as direct sunshine, fire etc.

- Only charge the lamp with the supplied accessories.

Chemical burns!

Leaking battery fluid may cause chemical burns if it comes into contact with the skin or other parts of the body.

- Avoid contact with the skin, eyes and mucous membranes if battery liquid leaks out. Rinse the affected areas immediately with plenty of clear water and immediately seek medical attention.

- In the event of a leaking battery, ensure protective gloves are worn and remove spilled battery fluid with a dry, absorbent cloth.

Risk of injury!

The light of the LED is very bright and directly looking at it can damage the eyes.

- Never look directly into the luminous LED of the lamp.

- When using the lamp, be careful not to shine it into the eyes of people or other living beings.

Risk of damage!

Improper handling of the lamp may damage it.

- The light source in this lamp cannot be replaced.

When the light source has reached the end of its service life, replace the entire lamp.

- Place the light on an easily accessible, even, dry, heat-resistant and sufficiently stable surface.

Do not place the lamp near or on the edge of the surface.

- Never place the lamp on or near hot surfaces (oven hobs, etc.).

- Do not bring the lamp and the USB charging cable into contact with hot parts.

- Do not expose the lamp to weather (rain, etc.).

- Stop using the lamp if the plastic components of the lamp have cracks, fissures or become deformed.

Only replace damaged components with suitable original spare parts.

USING THE LAMP FOR THE FIRST TIME

Checking the lamp and the scope of delivery
 If you open the packaging carelessly with a sharp knife or other pointed objects, the lamp can be quickly damaged.

Be very careful when opening.

1. Remove the lamp from the packaging.
2. Check if the delivery is complete.
3. Check whether the light is damaged. If this is the case, do not use the lamp and contact the manufacturer.

Charging the lamp

Before using for the first time, charge the lamp fully.

1. For charging, place the lamp on a dry, horizontal surface.
2. Fully unwind the USB charging cable.
3. Insert the USB plug into the charging socket.
4. Insert the USB plug into a USB power source (e.g. computer, USB charger). Whilst the light is being charged, the charging indicator light turns red.
5. When the lamp is fully charged, the charging indicator light turns green. You can use the lamp.

OPERATION

The lamp provides two brightness levels (50 % and 100 %).

- Please operate the button on the bottom of the lamp to switch lamp on. The LEDs will illuminate at the 50% brightness level.

- To increase the brightness, touch the button again. The LEDs will illuminate at the 100% brightness level.

- To switch the lamp off, operate the button once more..

CLEANING

Risk of a short circuit!

Water or other liquids that have entered the housing may cause a short circuit.

- Never immerse the lamp in water or other liquids.

- Make sure that no water or other liquids get into the housing.

Risk of damage!

Improper handling of the lamp can damage it.

- Do not use abrasive cleaning agents, brushes with metal or nylon bristles, or sharp/metallic cleaning implements such as knives, hard spatulas etc. These can damage the surfaces.

- Never put the lamp into the dishwasher. This would destroy the lamp.

1. Allow the lamp to cool down completely.

2. Use a soft cloth moistened with lukewarm water and soap in order to clean the lamp.

3. Allow all parts to dry completely.

STORAGE

Before storage, all parts must be completely dry.

- Always store the lamp in a dry place.

- Protect the lamp from direct sunlight.

- Store the lamp out of the reach of children. Store it securely closed at a storage temperature between 5 °C and 20 °C (room temperature).

DISPOSAL

Disposal of the packaging

Dispose of the packaging according to type. Put card and cardboard in with the waste paper. Put film into the recyclable waste collection.

Disposal of the lamp

(Applicable in the European Union and other European countries with systems for the separate collection of recyclables)

Old appliances should not be disposed of with household waste!

If the lamp can no longer be used, the consumer is legally obliged to dispose of old appliances separately from household waste, e.g. at a collection point organised by the local council. This ensures that waste products are properly recycled and that negative environmental effects are avoided. Therefore, electrical appliances are marked with the symbol that is shown here.

Batteries should not be disposed of with household waste!

As a consumer, you are legally obliged to dispose of all batteries, whether or not they contain harmful substances, at a collection point in your neighbourhood or hand them over to a trader so that they can be disposed of in an environmentally-friendly manner. Please dispose of the lamp in full (with the battery) at your local collection point. Please ensure that the battery has been discharged!